



PALLET JACK PARTS

Atlas Zenith (Type 9) Frame

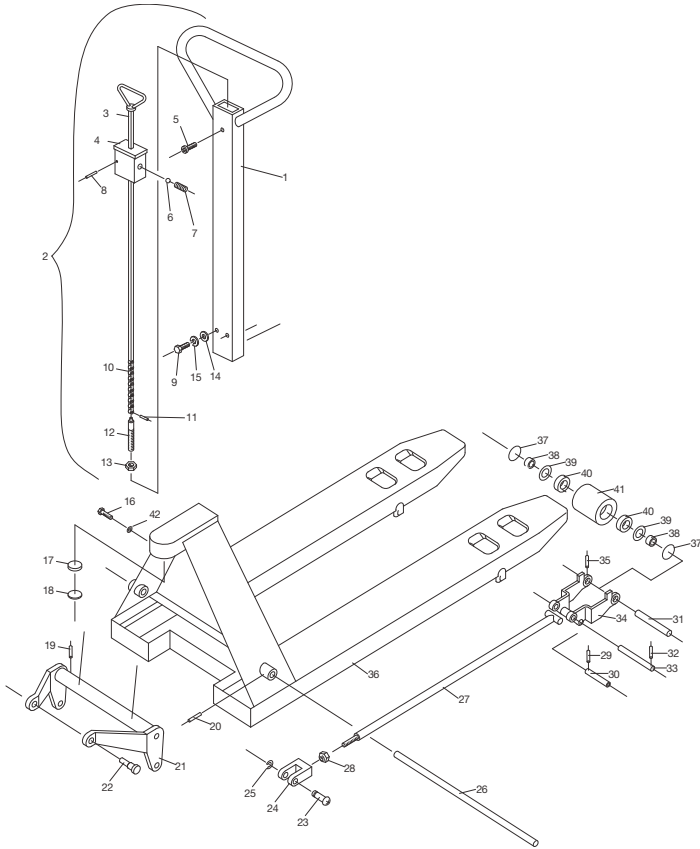

Atlas Zenith (Type 9) Hydraulic Unit

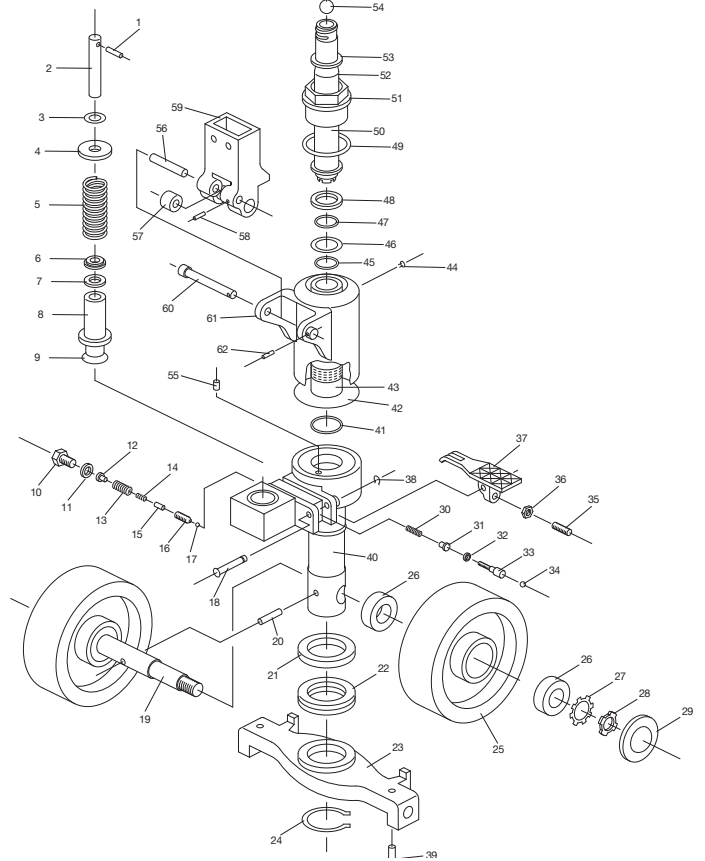

Atlas Zenith (Type 9) Frame

Item#	Part#	Description	Item#	Part#	Description	Item#	Part#	Description
1	Z-1401	Handle Frame	18	Z-1203	Retainer	35	Z-1221	Roll Pin
2	Z-1401A	Handle Assembly	19	Z-1204	Oiler	36	Z-1222	Frame
3	Z-1402	Pull Rod	20	Z-1205	Roll Pin	37	Z-1223	Snap Ring
4	Z-1403	Support Base	21	Z-1206	Bell Crank	38	Z-1224	Spacer
5	Z-1404	Screw	22	Z-1207	Shoulder Bolt	39	Z-1225	Dust Cover
6	Z-1405	Ball	23	Z-1208	Rod Pin	40	Z-1226	Bearing
7	Z-1406	Spring	24	Z-1209	Clevis	41	Z-1227	Load roller assembly, black ultra poly on steel hub w/ bearings
8	Z-1407	Pin	25	Z-1210	Snap Ring	42	Z-1228	Lock Washer
9	Z-1408	Screw	26	Z-1211	Bell Crank Axle			
10	Z-1409	Chain	27	Z-1212	Push Rod			
11	Z-1410	Pin	28	Z-1213	Push Rod Hex Nut			
12	Z-141	Adjusting Screw	29	Z-1215	Roll Pin			
13	Z-1412	Nut	30	Z-1216	Push Rod Pin			
14	Z-1413	Washer	31	Z-1217	Load Wheel Axle			
15	Z-1414	Lock Washer	32	Z-1218	Roll Pin			
16	Z-1201	Screw	33	Z-1219	Pivot Axle			
17	Z-1202	Washer	34	Z-1220	Load Wheel Bracket			

Atlas Zenith (Type 9) Hydraulic Unit

Item#	Part#	Description	Item#	Part#	Description	Item#	Part#	Description
1	Z-1101	Pin	20	Z-1122	Spring Pin	57	Z-1181	Roller
2	Z-2102A	Pump Piston	21	Z-2123A	Bearing Cover	58	Z-1182	Roll Pin
3	Z-1104	Washer	22	Z-1124	Thrust Bearing	59	Z-1183	Handle Base
4	Z-2105	Washer	23	Z-2125A	Traverse	60	Z-1184	Pivot Pin
5	Z-1107	Spring	24	Z-1126	Snap Ring	61	Z-1186	Reservoir
6 A,B	Z-2104	Scraper	25	Z-1128	Steer wheel assembly, black poly on nylon hub w/bearings	62	Z-1185	Roll Pin
7 A,B	Z-2105	U-Cup	26	Z-1129	Bearing	Kits A	Z-1187	Piston Seal Kit
8	Z-2110A	Pump Cylinder	27	Z-1130	Tab Washer	Kits B	Z-1188	Complete Seal Kit
9 A,B	Z-111	10-Ring	28	Z-113	1Round Nut	Z-1189		Hydraulic Unit
10	Z-1112	Spring	29	Z-1132	Hub Cap	HU AT-5500		Rebuilt hydraulic unit-exchange
11 A,B	Z-1113	Copper Washer	30	Z-1134	Spring			
12	Z-1114	Spring Seat	31	Z-1135	Spring Guide			
13	Z-1115	Spring	32 A,B	Z-1136	Seal			
14	Z-1116	Spring	33	Z-1137	Release Pin			
15	Z-1117	Spindle	34 A,B	Z-1138	O-Ring			
16	Z-1118	Valve Seat	35	Z-1139	Adjustment Screw			
17	Z-1119	Valve Ball	36	Z-1140	Lock Nut			
18	Z-1120	Pin	37	Z-1141	Release Lever			
19	Z-112	1Steer Axle						